



Polished Chrome Grid Inserts

Fuse Unit Switch	GFUSE-PC
Flex Outlet Switch	GFLEX-PC
Blank Module Switch	GBLNK-PC
400W 2 Way Push On/Off Dimmer Switch	GD400-PC
10A 2 Way Switch	G12-PC
10A 2 Way & Off Switch	G12C-PC
10A Intermediate Switch	G13-PC
10A 2 Way & Off Retractive Switch	G16-PC
20A DP Switch	G30-PC
20A DP Key Switch	G30KY-PC
20A DP Emergency Light Test Switch	G30KY-PC-EL
20A DP Switch marked Coffee Maker	G30-PC-CM
20A DP Switch marked Dishwasher	G30-PC-DW
20A DP Switch marked Extractor Fan	G30-PC-EF
20A DP Switch marked Fridge Freezer	G30-PC-FF
20A DP Switch marked Fridge	G30-PC-FD
20A DP Switch marked Freezer	G30-PC-FZ
20A DP Switch marked Hob	G30-PC-HB
20A DP Switch marked Cooker Hood	G30-PC-CH
20A DP Switch marked Microwave	G30-PC-MW
20A DP Switch marked Oven	G30-PC-OV
20A DP Switch marked Tumble Dryer	G30-PC-TD
20A DP Switch marked Heater	G30-PC-HT
20A DP Switch marked Heating System	G30-PC-HS
20A DP Switch marked Immersion	G30-PC-IM
20A DP Switch marked Vent	G30-PC-VE
20A DP Switch marked Water Heater	G30-PC-WH
20A DP Switch marked Waste Disposal	G30-PC-WDI
20A DP Switch marked Washer Dryer	G30-PC-WDR
20A DP Switch marked Wine Cooler	G30-PC-WIC
20A DP Switch marked Washing Machine	G30-PC-WM