

Technical section

Wiring diagrams

Two Wire Master with Pushbutton, Touch or PIR Slave

Pushbutton Slave / Touch Slave / PIR Slave fitting (illuminated)


3 Core connection to Master

SLAVE PART NUMBERS: 350A-3, 360A-3, 376A-3, 550A-5, 560A-5, 570A-5

Rating at 240V a.c.

Masters & Slaves - 2 Wire

Masters	Slaves
350A-1	350A-3
360A-1	360A-3
376A-1	376A-3
550A-3	550A-5
560A-3	560A-5
570A-3	570A-5

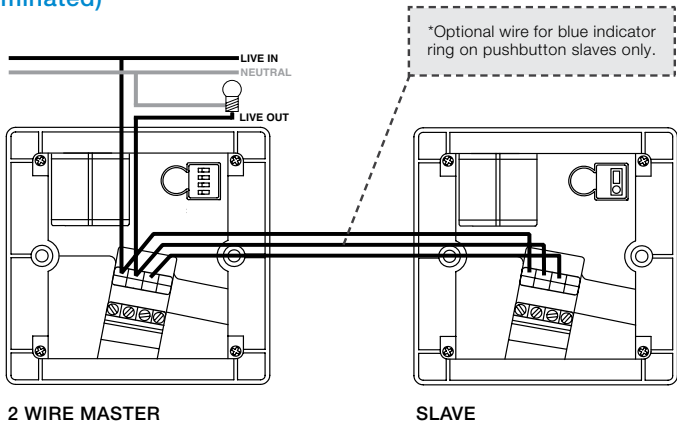

Three Wire Master with Pushbutton, Touch or PIR Slave


Pushbutton Slave / Touch Slave / PIR Slave fitting (illuminated) - 3 Core

SLAVE PART NUMBERS: 350A-3, 360A-3, 376A-3, 550A-5, 560A-5, 570A-5


Rating at 240V a.c.

Masters & Slaves - 3 Wire

Masters	Slaves
3875A-1	350A-3
2235A-1	360A-3
370A-1	376A-3
550A-1	550A-5
560A-1	560A-5
570A-1	570A-5
320A-1	Any Slave above
520A-1	Any Slave above

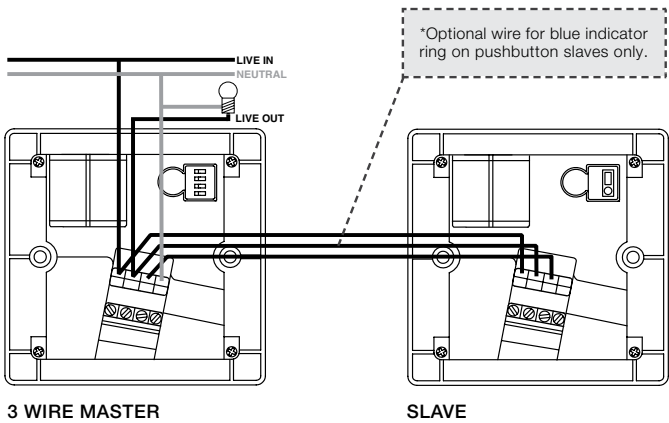

Multiple Slave Fitting - Illuminated Timers

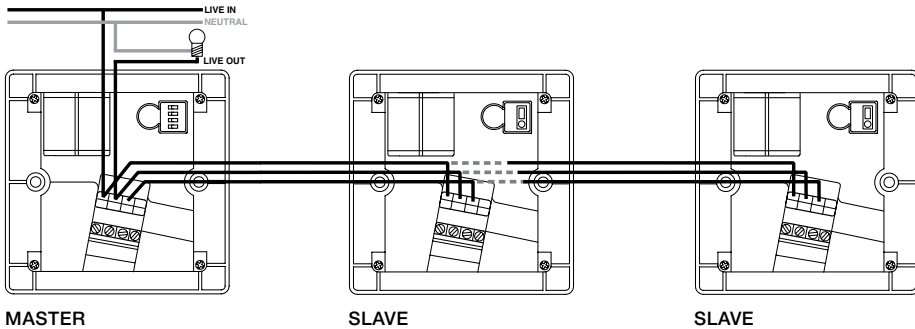

IMPORTANT NOTICE: All wiring should be carried out by a competent person or a qualified Electrician in accordance with the current IET Wiring Regulations. If you believe the unit is faulty call Elkay technical on 01675 468200 or return to place of purchase.