

# INSTALLATION INSTRUCTIONS

## 110V 72W LED UPLIGHT MODELS: ULS72YPW, ULE72YPW


### INTRODUCTION

The 110V 72W LED Uplight is a perfect solution for areas on a site that need a high amount of light output in all directions, this is due to the 360 degree diffuser design. It comes complete with a 3m arctic cable, 16A 110V plug and a 16A 110V socket.

### BOX CONTENTS

1 x Uplight

### SPECIFICATION

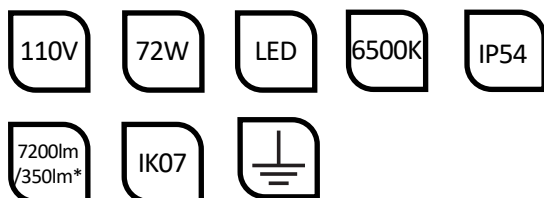

100lm/W

\*Lumen output in emergency mode

Dimensions: L: 1495 x Diameter: 820mm

Finish: Opal diffuser & yellow ABS body

LED: 300pcs of SMD 2835

Working Temperature: -20°C - 40°C (0°C - 40°C for emergency version)

H05VV-F 3m Cable included

PG11 Cable Glands included



### SAFETY WARNING

- The installation should be carried out by a qualified electrician in compliance with the current edition of the IEE Wiring Regulations.
- Prior to installation, carry out the necessary risk assessment considering the people who could be at risk, the level of risk and the precautions required to control the risk
- Ensure that the circuit supply is isolated either by the circuit supply fuse being removed or the applicable circuit breaker being turned off before installation or any maintenance.
- Check the total load on the circuit ensuring the luminaire does not exceed the rating of the circuit cable, fuse or circuit breaker.
- If the fitting incorporates control gear, ensure careful sizing to avoid instances of nuisance tripping of the protective device used in the installation.
- Follow the provided installation instructions, using the fixings supplied or recommended.



**Red Arrow Trading Ltd**  
Elsworth House, Herries Road South  
Sheffield, S6 1QS

**Tel:** 0800 195 0006 **Fax:** 0870 195 0006

**Email:** sales@redarrowtrading.com **Web:** www.redarrowtrading.com

# INSTALLATION INSTRUCTIONS

## 110V 72W LED UPLIGHT MODELS: ULS72YPW, ULE72YPW

### INSTALLATION INSTRUCTIONS

1. The 72W LED Uplight is for use with 110V supply only.
2. Remove the 72W LED Uplight from the box.
3. Open out each of the three legs to erect the 72W LED Uplight. Please make sure the light is placed on a sturdy and level surface.
4. Attach the 110V plug to a suitable power source and test to see if the light is working.
5. If the emergency option has been selected, then the switch on the side must be in the 'ON' position. To charge the battery on the emergency version, the 72W LED Uplight must be left connected and powered on. This will then begin to charge, the longer it is left connected, the longer the emergency light will last. (E.g. 24 hours charge will give 3 hours run time).
6. If you remove power from the 72 LED Uplight and do not wish to have it running in emergency, then you can put the switch into the 'OFF' position. Please remember to put the switch back to the 'ON' position, before using again.
7. The 72W LED Uplight can also have further ones attached to it, the maximum number of lights is 20.

### GUARANTEE

This product is guaranteed for a period of 2 years from the date of purchase. The guarantee is invalid in the case of improper use, tampering, removal of the Q.C. date label, installation in an improper working environment or installation not according to the current edition of the I.E.E. Wiring Regulations (BS7671). The guarantee is also invalidated if the luminaire has been Mega tested. Should this product fail during the guarantee period it will be replaced free of charge, subject to correct installation and return of the faulty unit. We do not accept responsibility for any installation costs associated with the replacement of this product. Your statutory rights are not affected. We reserve the right to alter specifications without prior notice.

### MAINTENANCE

- This fitting will require routine cleaning if used in adverse (dust, paint, welding, oils etc) environments.
- When this fitting comes to the end of its life or you choose to replace it, please do not dispose of it with your normal household waste. Please recycle where the facilities exist, check with your local authority or retailer for suitable options.



**Red Arrow Trading Ltd**  
Elsworth House, Herries Road South  
Sheffield, S6 1QS

**Tel:** 0800 195 0006 **Fax:** 0870 195 0006  
**Email:** sales@redarrowtrading.com **Web:** www.redarrowtrading.com