




CMA022



CMA023



 CMA044

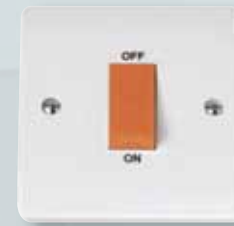

CMA200



CMA201




CMA202



CMA046



 CMA622

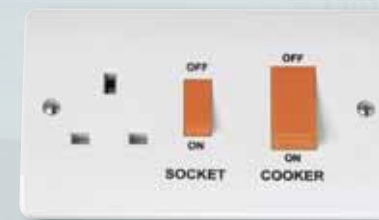

CMA204



CMA203




CMA623



CMA040



 CMA042

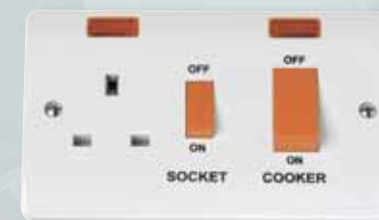

CMA205

20A Control Switches with Flex Outlet Through Bottom

- CMA022 20A Double Pole Switch
- CMA023 20A Double Pole Switch with Neon
- CMA044 20A Double Pole Switch 'Water Heater'
- CMA046 20A Double Pole Switch with Neon 'Water Heater'

20A Control Switches without Flex Outlet

- CMA622 20A Double Pole Switch
- CMA623 20A Double Pole Switch with Neon
- CMA040 20A Double Pole Switch 'Water Heater'
- CMA042 20A Double Pole Switch with Neon 'Water Heater'

45A Plate Switches (Red Rockers)

- CMA200 45A 1 Gang Single Cooker Outlet
- CMA201 45A 1 Gang Single Cooker Switch with Neon
- CMA202 45A 2 Gang Single Cooker Switch
- CMA203 45A 2 Gang Single Cooker Switch with Neon
- CMA204 45A Cooker Switch with 13A Switched Socket Outlet
- CMA205 45A Cooker Switch with 13A Switched Socket Outlet and Neons

Standards: BS EN 60669

Back Box Depth: 25mm Minimum Cable Size: 4 x 2.5mm²

Dimensions: 1 Gang (86mm x 86mm x 9.5mm)

Standards: BS 4177, BS EN 60669

Back Box Depth: 35mm Minimum Cable Size: 45A: 1x16mm²

Dimensions: 1 Gang (86mm x 86mm x 9.5mm), 2 Gang (146mm x 86mm x 9.5mm)