



Installation Instructions for SafetySure RCD Spur Unit M92W, M92M

IMPORTANT

This product should be installed by a competent person and in accordance with the current IEE Wiring Regulations. If in doubt, consult a qualified electrician.

Electricity is dangerous and an RCD must not be used as a substitute for normal precautionary measures.

Always disconnect from mains supply before any inspection or repair to equipment. Do not allow children to tamper with electrical devices.


This device will protect against live and neutral leakage faults to earth, it will not protect against electric shock due to contact with both conductors, short circuits between live and neutral, or a fault in the wiring supplying this device.

TO FIT THIS SAFETYSURE RCD SPUR UNIT –

Switch off the power supply at the mains in order to isolate the existing spur. Remove the old spur, then simply connect using the easy to follow wiring diagram.

IMPORTANT:

When using the front plate cable entry the plastic cut out must be removed with care.

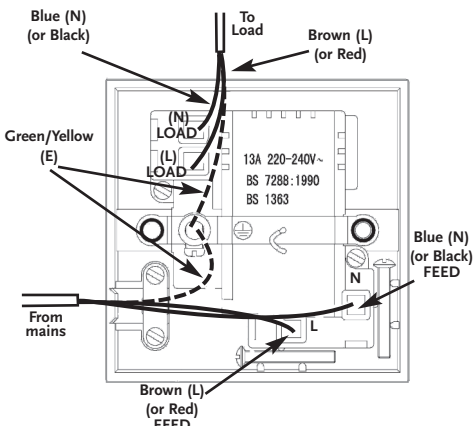

If earth conductors are bare, they must be sleeved with appropriate green/yellow sleeving.

If you are in any doubt about connecting this product consult a qualified electrician.

Wiring insulation tests should be completed before setting the SafetySure RCD Spur to avoid misleading instrument readings and possible internal damage to the unit.

PLEASE CARRY OUT THIS SIMPLE TEST PROCEDURE PRIOR TO EACH USE.

- 1. Press green(R) reset button.
- 2. Indicator window will turn red*.
- 3. Press white Test button (T).
- 4. Red window indicator will disappear*. This means the RCD has tripped successfully.
- 5. To reset – press green (R) button.

* If indicator fails to work, do not use and return to place of purchase.

NOTE 1:

If the red window indicator disappears once the spur has been reset, this may mean that the appliance or the cable lead is faulty, and should be checked by a qualified electrician.

NOTE 2:

Remove this RCD from circuit before performing any high voltage insulation tests.

TECHNICAL DATA

Rated voltage:	230V AC 50Hz
Maximum operating current:	13A (3A inductive)
Rated trip current:	30mA
Trip speed:	30mS Typical
RCD contact break:	Double pole
Test/Reset buttons:	Responsive to both positive and negative cycles
Dimensions:	86.5mm x 86.5mm x 48mm
Conforms to BS7288:1990 & BS1363	

GUARANTEE

Your KingShield RCD Spur Unit is guaranteed for 12 months from the date of purchase.

This does not affect your statutory rights.

Please keep these instructions for future reference.

INSTALLER - Please pass instruction manual onto the owner of the unit