



## Snug Neo Air Thermostat

Part code: NeoAir

- High-end look, available in white.
- Wirelessly connects to wiring centres and boiler.
- Can also be controlled remotely from your smartphone.
- With 2 channels to control both heating and hot water.
- Self-learning for optimum comfort and efficiency.
- Inbuilt temperature and humidity sensor.
- Helpful holiday mode.

### Specification

- 3500w / 230v.
- 5°C to 35°C.
- Unit dimensions 89 x 89mm.
- Unit depth 35mm.
- 2 year manufacturer's warranty.
- IP20.



## Snug UH8-RF wireless wiring centre

The UH8-RF is our eight-zone wireless wiring centre and it's designed to work with our Neo Air thermostats, giving installers a totally wireless solution. As you might expect, it allows you to control eight zones, as well as providing an outlet for a hot water cylinder. It gives you a 230v output, on demand, from any zone, so you can switch on the relevant actuators, underfloor heating pumps and valves. You can also connect to almost any boiler, volt free, sending a signal via RF to the RF switch. As the UH8-RF provides central switching, the best place to put it is next to the underfloor heating manifold.

### Specification

- 230v 8-zone wiring centre.
- Snappable gates for easy access.
- Connects wirelessly to the boiler with our RF switch.
- Multiple connection terminals for the actuators.