

Capacitor Switching Contactors for reactive or non-reactive capacitor banks

Part Number	Description
MC18N-K-10400AC	12.5kVar Cap. Sw. Contactor 3P, 1N/O Aux. 4000VAC coil
MC18N-K-10230AC	12.5kVar Cap. Sw. Contactor 3P, 1N/O Aux. 230VAC coil
MC32-K-00110	25kVar Cap. Sw. Contactor, 3P, 110VAC coil
MC32-K-00230	25kVar Cap. Sw. Contactor, 3P, 230VAC coil
MC32-K-00400	25kVar Cap. Sw. Contactor, 3P, 400VAC coil
MC50-K-00400	33.3kVar Cap. Sw. Contactor, 3P, 400VAC coil
MC62-K-00110	50kVar Cap. Sw. Contactor, 3P, 110VAC coil
MC62-K-00230	50kVar Cap. Sw. Contactor, 3P, 230VAC coil
MC62-K-00400	50kVar Cap. Sw. Contactor, 3P, 400VAC coil
MC74-K-00230	75kVar Cap. Sw. Contactor, 3P, 230VAC coil
MC74-K-00400	75kVar Cap. Sw. Contactor, 3P, 400VAC coil
MC115-K-00230	100kVar Cap. Sw. Contactor, 3P, 230VAC coil
MC115-K-00400	100kVar Cap. Sw. Contactor, 3P, 400VAC coil

DC Operated Contactor low power consumption 3W inrush-sealed

Part Number	Description
MCD10-S-10=24	Contactor 4kW 10A 3P, 1 N/O Aux. 24VDC coil
MCD14-S-10=24	Contactor 5.5kW 14A 3P, 1 N/O Aux. 24VDC coil
MCD18-S-10=24	Contactor 7.5kW 18A 3P, 1 N/O Aux. 24VDC coil
MCD22-S-10=24	Contactor 11kW 22A 3P, 1 N/O Aux. 24VDC coil
MCD32-S-00=24	Contactor 15kW 32A 3P, 24VDC coil
MCD40-S-00=24	Contactor 18.5kW 40A 3P, 24VDC coil

Accessories

Part Number	Description
MBA-11	1N/O + 1N/C for MB09-MB12 contactors - top mount
MBA-22	2N/O + 2N/C for MB09-MB12 contactors - top mount
MCA01	1N/C Contact, For MC10 to MC115 Contactors, Top Mount
MCA10	1N/O Contact, For MC10 to MC115 Contactors, Top Mount
MCAH01	High Switching Capacity 25A AC1, 1N/C Contact, Top Mount
MCAH10	High Switching Capacity 25A AC1, 1N/O Contact, Top Mount
MCAS-11	1N/O + 1N/C, For MC24 to MC115 Contactors, Side Mount
MCAT11	1N/O + 1N/C, For MC151 to MC316 Contactors, Top Mount
MC-I-W	Interlock for MC(D)10 to MC(D)40 Contactors
MC-I-X	Interlock for MC50 to MC74 Contactors
MC-I-Y	Interlock for MC90 to MC115 Contactors

Thermal Overload Relays

Part Number	Description
U12/16E0.9-MC	Manual reset Overload 0.6-0.9A, MC10N-MC22N
U12/16E1.2-MC	Manual reset Overload 0.8-1.2A, MC10N-MC22N
U12/16E1.8-MC	Manual reset Overload 1.2-1.8A, MC10N-MC22N
U12/16E2.7-MC	Manual reset Overload 1.8-2.7A, MC10N-MC22N
U12/16E4-MC	Manual reset Overload 2.7-4A, MC10N-MC22N
U12/16E6-MC	Manual reset Overload 4-6A, MC10N-MC22N
U12/16E9-MC	Manual reset Overload 6-9A, MC10N-MC22N
U12/16E11-MC	Manual reset Overload 8-11A, MC10N-MC22N
U12/16E14-MC	Manual reset Overload 10-14A, MC10N-MC22N
U12/16E18-MC	Manual reset Overload 13-18A, MC10N-MC22N
U12/16E23-MC	Manual reset Overload 17-23A, MC10N-MC22N
U12/16E30-MC	Manual reset Overload 22-30A, MC10N-MC22N
MCOR-1-0.18	Man./Auto reset Overload 0.12-0.18A, MC10N-MC32
MCOR-1-0.27	Man./Auto reset Overload 0.18-0.27A, MC10N-MC32
MCOR-1-0.4	Man./Auto reset Overload 0.27-0.4A, MC10N-MC32
MCOR-1-0.6	Man./Auto reset Overload 0.4-0.6A, MC10N-MC32
MCOR-1-0.9	Man./Auto reset Overload 0.6-0.9A, MC10N-MC32
MCOR-1-1.2	Man./Auto reset Overload 0.8-1.2A, MC10N-MC32
MCOR-1-1.8	Man./Auto reset Overload 1.2-1.8A, MC10N-MC32
MCOR-1-2.7	Man./Auto reset Overload 1.8-2.7A, MC10N-MC32
MCOR-1-4	Man./Auto reset Overload 2.7-4A, MC10N-MC32
MCOR-1-6	Man./Auto reset Overload 4-6A, MC10N-MC32
MCOR-1-9	Man./Auto reset Overload 6-9A, MC10N-MC32
MCOR-1-11	Man./Auto reset Overload 8-11A, MC10N-MC32
MCOR-1-14	Man./Auto reset Overload 10-14A, MC10N-MC32
MCOR-1-18	Man./Auto reset Overload 13-18A, MC10N-MC32
MCOR-1-24	Man./Auto reset Overload 17-24A, MC10N-MC32
MCOR-1-32	Man./Auto reset Overload 23-32A, MC10N-MC32
MCOR-2-14	Manual reset Overload 10-14A, MC24-MC40
MCOR-2-20	Manual reset Overload 14-20A, MC24-MC40
MCOR-2-28	Manual reset Overload 20-28A, MC24-MC40
MCOR-2-42	Manual reset Overload 28-42A, MC24-MC40



This is just a selection of our most popular Contactors. For the entire range, please go to www.imopc.com or scan this QR code with your smartphone.



MC18N-K	MC32-K	MC74-K	MC115-K	MCD10-S-10=24	MC10N-S-10-24DC
					