



Installation Instructions

Luminaire Code(s) – AMELED/ER/3NM/ST, AMELED/OA/3NM/ST

General Installation Instructions

These instructions should be read carefully prior to any installation and retained after completion for further reference and maintenance. Please give these instructions to the building owner/occupier after installation.

Important Safety

1. Before installation, maintenance or lamp replacement, ensure that the mains supply to the luminaire is switched off and the circuit supply fuses are removed or the circuit breaker is turned off.
2. It is recommended that only a qualified electrical contractor carries out the installation of this luminaire and that the luminaire is installed in compliance with the current edition of the IEE Wiring Regulations.
3. The person carrying out the installation is to check and verify that the total load on the circuit, including that of this luminaire does not exceed the rating of the circuit cable, fuse or circuit breaker.
4. Where a luminaire incorporates discharge control gear (inductive load), the circuit capacity and ratings require careful sizing to avoid nuisance tripping of the protective device used in the installation.
5. Where applicable, careful consideration should be taken during installation to ensure that all fixings and/or suspensions are of a suitable size for the luminaire being installed.

Ratings

1. All luminaires are manufactured & tested in compliance with the requirement contained within BS EN 60598 and are CE marked.
2. All luminaires that are of Class 1 construction and that are marked accordingly, **MUST** be earthed.
3. All luminaires are designed to operate at 230Volts AC -6%/+10% = 216Volts to 252Volts. Do not operate outside these voltages.
4. All luminaires are only suitable for applications within their rated Ingress Protection limits as stated.
5. **Max Ambient Temperature 25°C**

INSTALLATION



- All leads from this unit are clearly marked
- Drill a hole in the desired surface (Cut Out - 72mm). Ensure the mounting location provides adequate distance from water pipes, electrical cables, ceiling joists or other structural obstacles.
- Bring through supply cable and connect to the Emergency Pack ensuring correct polarity is observed.

Connect as follows:-

PERMANENT LIVE (L)	BROWN OR RED (continuous)
NEUTRAL (N)	BLUE OR BLACK
EARTH	GREEN / YELLOW

- Connect the battery pack.
- Insert the emergency pack through the aperture. The pack will require sufficient space behind ceiling to manoeuvre into position. It must not be mounted near any heat source or where the ambient temperature normally exceeds 25° C.
- Offer the luminaire through the aperture, bend back the springs and push gently into the ceiling. Do not install the luminaire onto new plaster or wet paint.
- Energise the permanent (unswitched) mains supply and check the status indicator illuminates and check the mains health operation of the lamp(s) if they are maintained.
- Allow the unit to charge for a least one hour before isolating the permanent mains supply to the unit to briefly check the operation of the lamp(s) in the emergency mode.

DIAGRAM

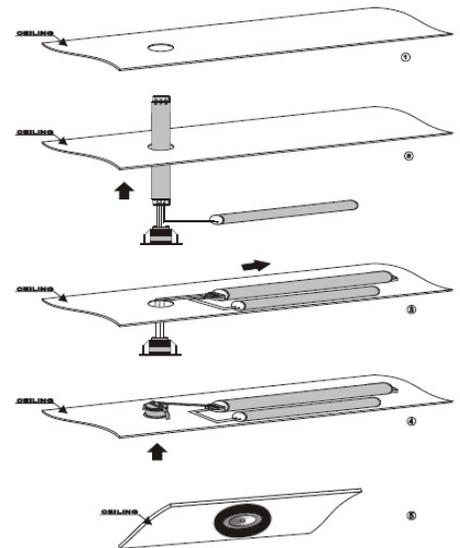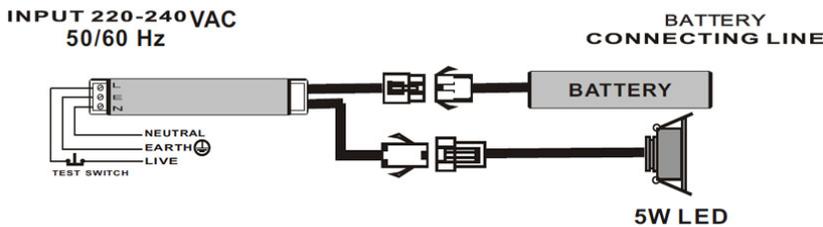

Warning

- Disconnect the mains supply and unplug the battery leads before working on the unit.
- Failure to comply with these instructions may result in irreparable damage to the emergency control gear.
- This product must not be modified in any way as this will negate any Safety approvals, and may render the product inoperable or unsafe. The product must be installed in accordance with the instructions
- **DO NOT** deep discharge the batteries pack in emergency output for over a period to the battery.



Self Test

Operating and recommended Routine Test Procedure

Please refer to the literature below as to the functionality of Self Test Emergency.

Read these instructions carefully to ensure safe and reliable operation of this emergency luminaire. The following operations are designed to ensure the continued protection of your premises and occupants, in the event of the possibility of a failure of the normal lighting supply.

- The self test unit inside this product is designed to test the fitting in accordance with current legislation BS EN 62034:2012.
- When the unit is first installed the fitting will randomly select a test date of between 200 and 365 Days.
- Once this date is set it will continue to test at the same time every year for a full 3 hour test.
- Once the product has been on charge for 24hrs, the luminaire will discharge for 5 seconds for test purposes.
- Every 30 days the installation will be tested for 10 minutes.
- The luminaire will show a constant Green LED in normal condition.

Using the "reset" button you can press for 1 second and you can reset the random testing or press for 3 seconds to simulate a 5 minute emergency test.

During the emergency testing the luminaire will test the following:

- The battery connection
- Emergency operation time
- Lamp / LED operation

Should a fault occur then the following can be observed:

- If there is a failure of the battery such that it becomes disconnected then there will be a continuous red LED.
- If the system fails the 10minute / 3 hour duration test then the red LED will flash slowly
- If the lamp / LED's fail the red LED will flash quickly.

If there is a fault indicated as per any of the above and the luminaire is repairable, the indicated fault will not cease until the repair has been completed and the supply is reinitiated.

Should there be a supply failure to the luminaire the emergency mode will activate. When the supply is reinitiated, the luminaire will continue with the same testing period as before. The self test date will be stored within the luminaire for 7 Days.

Warning

- Disconnect the mains supply and unplug the battery leads before working on the unit.
- Failure to comply with these instructions may result in irreparable damage to the emergency control gear.
- This product must not be modified in any way as this will negate any Safety approvals, and may render the product inoperable or unsafe. The product must be installed in accordance with the instructions.



Disposal of Electronic Equipment WEEE Directive 2002/96/EC

This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Ensure that this luminaire and lamp is disposed of in accordance with the WEEE Directive. Contact a local Council Waste Dept. Local Amenity Site, or the Environment Agency for further information. **RoHS** - All components and materials used in this product are **RoHS** 2002/95/EC compliant.

